


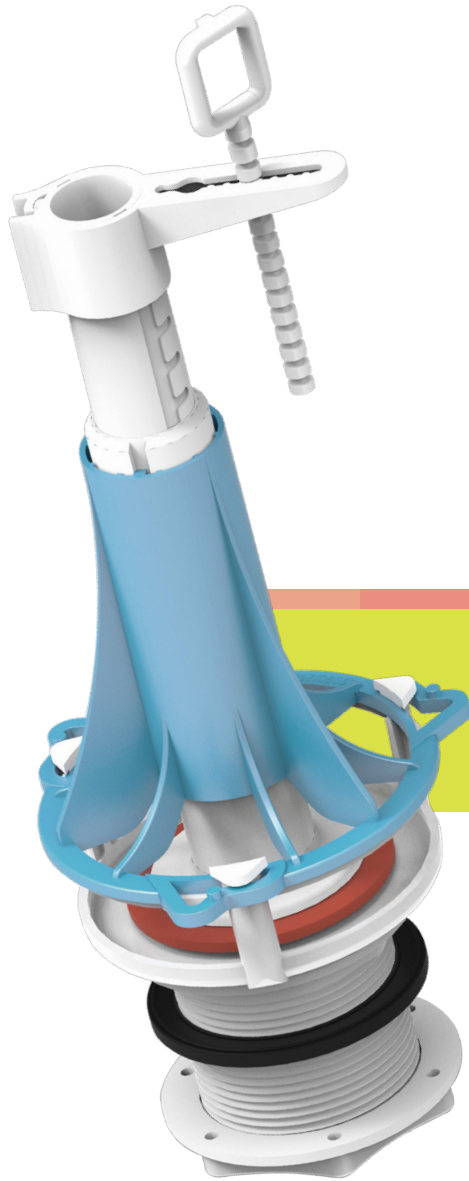

Dutton Plastics
ENGINEERING
A Division of the Zimco Group (Pty) Ltd.

Patent Pending

Supa Flush Lite Outlet Valve

SERVICE GUIDE

www.duttonplastics.co.za


Tools required:
Water pump pliers



The supaflush/lite outlet valve is a universal valve that fits most cisterns.

There is not much that could go wrong with these valves, but here's a basic service guide in case required.

Before doing anything, ensure water is closed and the cistern is empty before removing your outlet valve. Note that when servicing the valve, the top section can be removed from the cage, without removing the complete valve.

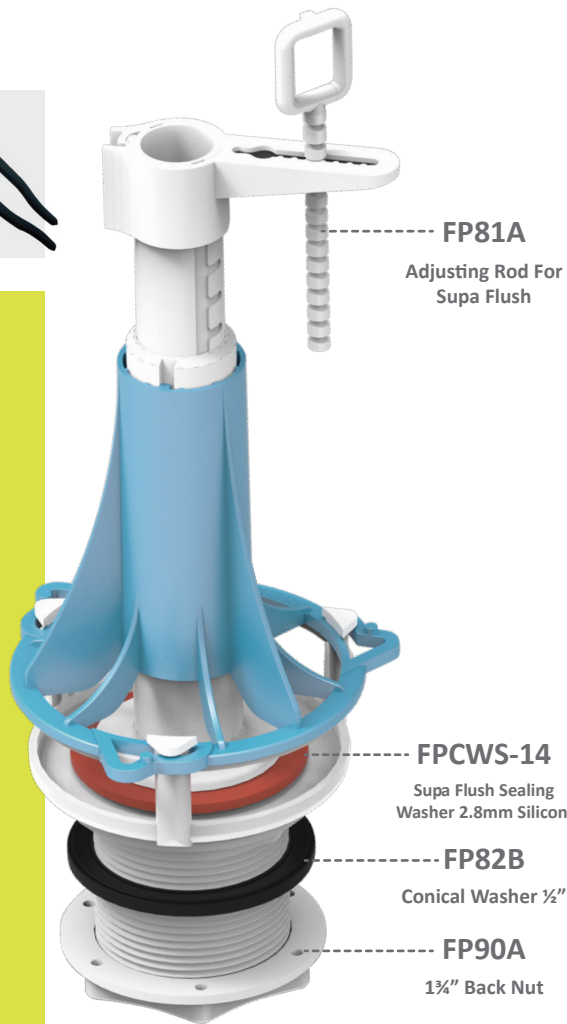

FP81A

Adjusting Rod For
Supa Flush

FPCWS-14

Supa Flush Sealing
Washer 2.8mm Silicon

FP82B

Conical Washer ½"

FP90A

1¾" Back Nut

Step 1.

Unclip the handle lever arm from the bubble blower..

Step 2

Turn the blue section anti-clockwise to remove from the cage.

Step 3

Remove the red washer from the bottom of the stem, and ensure it is clean and free from debris. Should the washer be worn out, replace it with a new DPE sealing washer.

Step 4

Put the blue section back onto the cage by turning it clockwise and ensure it clips into the allocated space

Step 5

Put the lever arm back into the bubble blower. Ensure that the lever arm has some play that it doesn't prevent the float to sit flush on the cage.

Refrain from using putty or silicone. The washer is conical to ensure a proper seal. The backnut should be tightened with the water pump pliers.

For more information on our range visit www.duttonplastics.co.za



FPCWS-14

Supa Flush Sealing
Washer 2.8mm Silicon



FP82B

Conical Washer ½"



FP81A

Adjusting Rod For
Supa Flush



FP82B

Conical Washer ½"



FP90A

1¾" Back Nut